



## CHAMPAGNE FOUNTAINS

### OPERATING INSTRUCTIONS:

- ◆ Pour Champagne or clear punch into bowl of fountain at least half full.
- ◆ Use 3-2 prong adapter or grounded outlet.
- ◆ Plug in fountain when ready to serve.
- ◆ Float dry ice in beverage bowl to chill.

### WARNING:

- ◆ Use with pulp-free beverages only.
- ◆ Do not immerse cord, plug or electrical base in water or other liquids.
- ◆ Never leave children unattended when near unit.
- ◆ Unplug when not in use.
- ◆ Secure cord from heat or possible hazards.
- ◆ Do not run fountain dry.

### CLEAN-UP:

- ◆ Rinse with clear water after use.
- ◆ Empty remaining liquid and wipe dry.
- ◆ Do not dismantle fountain. Run warm water through unit to clear.



***Stainless Steel***

***Electrical power required:*** 120 volts.

***Weight:*** ~ 20 pounds.

***Dimensions:*** 22" Height / 22" Diameter

***Capacity:*** 5 Gallons