



ALUMINUM OUTDOOR HEATER

OPERATING INSTRUCTIONS:

- ◆ Ensure the control knob is [**OFF**] and **SLOWLY** open the gas cylinder valve.
- ◆ Push and turn the control knob to [**PILOT**] position. The igniter will spark at the same time.
- ◆ Check pilot flame through the 1/2" match lighting hole.
- ◆ Firmly depress the knob for 15 seconds after lighting.
- ◆ Turn control knob to [**ON**] position.
- ◆ If the pilot does not light, turn the control knob to the [**OFF**] position and try again from the beginning.

CLEAN UP:

To turn heater and pilot off:

- ◆ Turn control knob to [**PILOT**].
- ◆ Depress slightly and turn to [**OFF**] position.
- ◆ *Note:* Wait five minutes after complete shutoff of heater before relighting pilot.

WARNING:

- ◆ Allow one minute to purge air through pilot after connection with a new gas tank.
- ◆ An igniter has been built in as part of the gas control valve which will be activated when the valve stem is depressed and turned counter-clockwise.
- ◆ Turn the gas tank off when heater is not in use.

CLEARANCE:

- ◆ Minimum Clearance to adjacent combustible surfaces are as follows:
 - ◆ Top: 18"
 - ◆ Sides: 24"
 - ◆ Below: 84"

SPECS:

- ◆ **Propane Tank Requirement:** One, 5 gallon tank. (lasts about 8 hours)
- ◆ **Device Max BTU:** 40,000
- ◆ **Propane Tank BTU:** 455
- ◆ **Height:** 8'

