



BRONZE OUTDOOR GLASS TUBE HEATER

LIGHTING INSTRUCTIONS:

- ◆ Ensure the control knob is **[OFF]** and **SLOWLY** open the gas cylinder valve.
- ◆ Press and turn the control knob to **[LIGHT]**.
- ◆ Check for the pilot flame through the glass tube. If the pilot does not light, turn the control knob to the **[OFF]** position and try again from the beginning. (Several attempts may be necessary)
- ◆ With the pilot light lit, keep the control knob pushed down for 15 seconds then turn the control knob **[LOW]**.
- ◆ Adjust temperature as desired.

CLEAN UP:

- ◆ To turn the heater off, turn the control knob to **[OFF]**.
- ◆ Close the valve on your LP cylinder to conserve gas when not in use.

WARNING:

- ◆ This appliance is for outdoor use only. If stored indoors, detach and leave LPG cylinder outdoors.
- ◆ Turn the gas tank off when heater is not in use.
- ◆ The gas supply must be turned off at LP-gas supply cylinder when this appliance is not in use.
- ◆ Only cylinders marked "propane" shall be used
- ◆ Do not store a spare LP-gas cylinder under or near this appliance.
- ◆ Hot while in operation. Do not touch.
- ◆ Keep Children, clothing, furniture, gasoline and other liquids having flammable vapours away.

CLEARANCE:

- ◆ Minimum Clearance to adjacent combustable surfaces are as follows:
 - ◆ Top: 50"
 - ◆ Sides: 50"

SPECS:

- ◆ **Propane Tank Requirement:** One, 5 gallon tank (lasts ~ 8 hours)
- ◆ **Device Max BTU:** 40,000
- ◆ **Propane Tank BTU:** 455
- ◆ **Height:** 89"

**Device includes wheels for easy mobility.*

