



SODIR OVEN

PREHEATING:

- ◆ Select temperature by rotating the thermostat knob clockwise to desired temperature setting.
- ◆ Turn the timer knob that also acts as an **[ON/OFF]** switch clockwise to the maximum setting (120 min) or set timer at continuous position marked by a hand icon on the timer dial.
- ◆ Both indicator lights (green and red) will be lit.
- ◆ The **red** light will stay on until the oven reaches the desired temperature.
- ◆ The **green** light will stay on until the timer reaches the indicated time setting.
- ◆ Allow up to 20 minutes for the preheating process.

COOKING:

- ◆ Select the desired cooking or baking temperature (unless it is already set).
- ◆ turn the timer knob clockwise to select the time setting.
- ◆ The red light will stay on until the oven reaches the desired temperature.
- ◆ When the set time is elapsed, the heating element and the blower fan will be switched off and the green indicator light will go out.
- ◆ At the end of the cooking cycle, the timer produces repetitive buzzing signal until it is depressed.
- ◆ The timer can be used in continuous mode. To do so, turn the timer counterclockwise from the **0** position.

COOLING DOWN:

- ◆ Turn the regulating thermostat knob counterclockwise to any position between **0** and the first temperature position marked **200 F**.
- ◆ Turn the timer knob to select the appropriate time setting or to continuous mode.
- ◆ It is not necessary to keep the door partially open to operate the oven in its "cool down" mode.

CLEAN UP:

Always ensure that the oven is disconnected from the main power supply before cleaning.

- ◆ Allow the oven to cool before cleaning.
- ◆ Remove the baking wire racks and clean them separately using a damp cloth or sponge.
- ◆ Do not use abrasive sponge on exterior or interior surfaces.
- ◆ Do not wash oven under running water.
- ◆ Do not spray the exterior motor housing with any liquid.
- ◆ Do not allow water to drip into the motor housing or onto electrical component.

SPECS:

- ◆ **Electrical power required:** 120 volts, 1500 watts, 14 amps.
- ◆ **Interior Dimensions:** 14 ½" **D** x 18 ½" **W** x 13" **H**
- ◆ **Exterior Dimensions:** 23" **D** x 23" **W** x 27" **H**

